

VTB LUXURY PLANK FLOORS

 **Awake** Flooring




VTB LUXURY PLANK SPECS

- ▣ **Standard Plank size 7" x 48"**
 - **Special Order size: 6" x 36", 6" x 48", 12" x 24"**
- ▣ **Standard Plank Thickness: 5.5mm**
 - **Special Order Thicknesses available**
- ▣ **Wear Layer: 20mil (0.5mm) UV no wax**
- ▣ **Fire Rating: Class A**
- ▣ **STC Rating: 55**
- ▣ **IIC Rating: 59**
- ▣ **Static Load: 2200psi**
- ▣ **ADA Slip Resistance: Meets Criteria for floors and Ramps**

VTB LUXURY PLANK FLOORS

Current Colors available

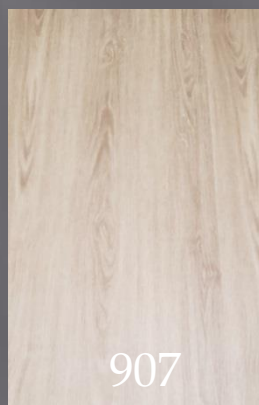

Special Order: Various colors, textures and patterns are available

Flooring Facts:	VTB Quiet Plus	Glue Down LVT	Solid Locking LVT	Locking LVT with ordinary HDF core	Laminate
<i>Fast and Easy to Install Without Acclimation</i>	✓	✗	✗	✗	✗
<i>Installs in Large Rooms Without Transition Strips</i>	✓	✓	✗	✗	✗
<i>Installs With Minimal Floor Prep</i>	✓	✗	✗	✓	✓
<i>Resists Water Without Damage to the Flooring</i>	✓	✓	✓	✗	✗
<i>Dimensionally Stable - Will Not Expand or Contract</i>	✓	✓	✗	✗	✗
<i>Adds Warmth to the Floor</i>	✓	✗	✗	✗	✗
<i>Resists Subfloor Mold and Mildew</i>	✓	✗	✗	✗	✗
<i>Reduces Noise - a Quieter Floor</i>	✓	✗	✗	✗	✗
<i>Hides Subfloor Imperfections</i>	✓	✗	✗	✓	✓
<i>Installs Over Existing Hard Surface Floors</i>	✓	✗	✓	✓	✓




Technical Specifications

Standard Plank: 7"x48"

Test Item	Test Methods	Test Result
<i>Resistance to Chemicals</i>	ASTM F925	Pass
<i>Effect of a Castor Chair</i>	EN 425:2002	Pass
<i>Static Load Limit</i>	ASTM 970-00	Pass (Residual indentation: 0.005mm) PSI800
<i>Determination of Flexibility</i>	EN 435:1994	Pass
<i>Color Fastness to Light</i>	ISO 1-5 B02:1994+Amd1-1998+ Amd2-2002:Xenon-Arc Lamp	Pass (6 or Better)
<i>Static Coefficient of Friction-James</i>	ASTM D2047	Pass 0.95 Dry / 0.93 Wet
<i>Critical Radiant Flux</i>	ASTM E648-10	Pass Class 1
<i>Dimensional Stability</i>	ASTM F 1066-4	Pass

EASY LOCK INSTALL GUIDE

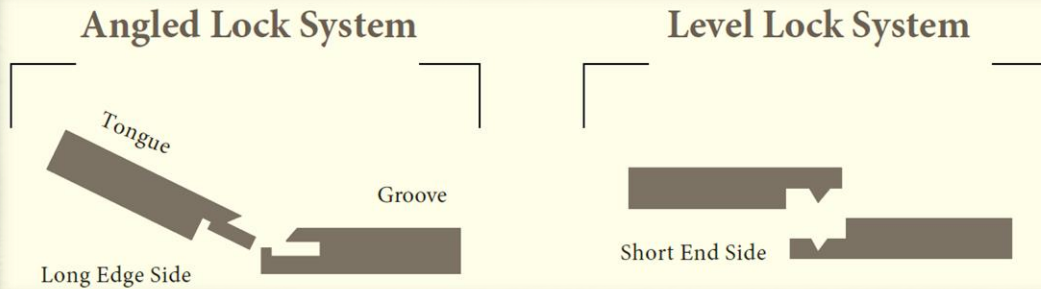

1. Create a 1/4" - 3/8" space between the perimeter planks and the wall using spacers. Do not remove them until the installation is complete.
2. Installation of VTB Click with Easy Lock must begin from the left side of the room, working to the right.
3. Lay the first full piece with the long tongue side facing away from the wall.
4. First, place the short end clip on to the receiving groove to align the edges. Use a soft hammer to secure the level lock clip by tapping on the short end clip so it snaps into the receiving plank. Continue entire first row and cut last piece to fit, maintaining the necessary gap.



EASY LOCK INSTALL GUIDE



5. Working left to right, place the long edge of a new plank into the receiving groove of the plank in the previous row. Angle down and lay plank flat. Maintain a minimum end joint stagger of 6" throughout the installation process.



6. Take a new plank and connect the long edges together, while still in a 45-degree angle slide the plank until it is up to the already laid down piece. Then lower the plank until it is on top of the receiving short end, use a soft hammer to tap the flooring into a secure lock.



7. Cut the final row of planks to fit along the wall. Make sure all short edge drop lock systems are secured with a soft hammer.



8. Remove spacers. Cover expansion space with quarter round or another trim, being sure not to trap or pin down the floor.

VTB LUXURY PLANK FLOORS

